



1. Name and Parts

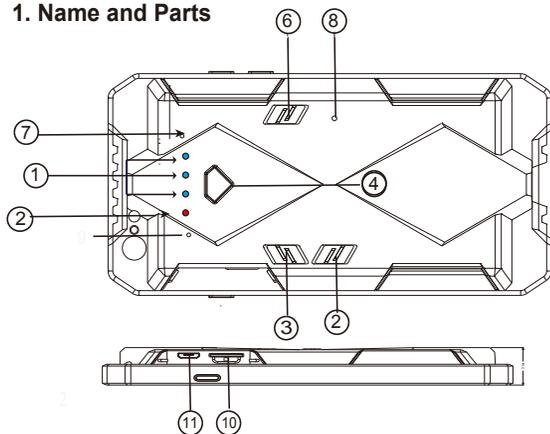

1. Battery Capacity Indication LED
2. Red LED-Rec On
3. Rec On/Off Switch
4. Power/Format/ Display Button
5. Zoom In/ Out Switch (4x)
6. Wifi On/Off Switch
7. Reset Button
8. Default Button
9. Microphone
10. Memory Card Slot
11. USB Port

1

2. Package Content

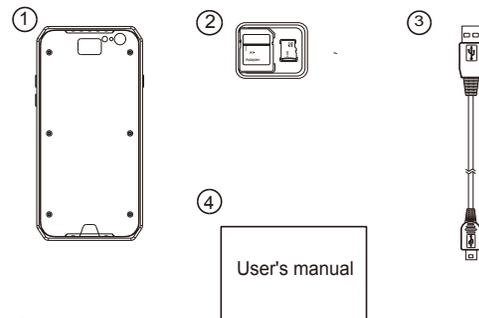

1. Smartphone 6 case DVR
2. Memory card
3. USB cable
4. User's manual

2

 
3. Assembly for Smartphone 6




1. Slide in your Smartphone 6 all the way into the case.



2. Done



 
3. Insert the memory card in the Memory Card Slot and put the plastic covering in place.



4. To remove your Smartphone 6 from the case, you will need to pull it off from the bottom.


3

 4. Charging the Battery



1. With the unit powered off, connect the supplier USB cable to the USB port on the base of the device.
2. Connect the other end of the USB cable to a computer or an USB charger.
3. To check the charging status, press Power on Button (4) and the three blue indicator will be blinking from left to right.
4. When the battery reaches to a complete charge, three blue LED will be steady on. When the battery percentage reaches 65%, the left and middle blue LED will be on. When the battery percentage drops to 35%, the left blue LED will still be on. Once the percentage is below 5%, the blue LED will blink and the unit will not be functional until you recharge the battery.

5. Memory Card Format

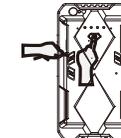

1. With the unit powered off (3) (slide switch at upper position), press and hold Format Button (4) then slide Rec On switch (3) and wait for a few seconds until you see the red LED blinks then release the Format Button (4).

4



2. Slide back the switch (3) to upper position when the red LED turns off.

6. Date and Time Setting

1. Right-click on Windows desktop. Choose Notepad to create a .txt (text) file. Then double-click the text file.
2. Suppose current time is February 25, 2014 13:00 Enter date and time information as 2015.11.25 13:00:00. **Note that a space must be presented in between date and hour and time is in 24-hour format.**
3. Name the file as **settime.txt** and save it to the root directory of the memory card.
4. Insert the memory card to the slot then power on the device. The date and time setting is now completed.
5. Please note when the date and time information is successful set to the device the **settime.txt** file should not be visible when you connect the device to the computer again.

5

7. Recording

1. Press Power Button (4) to turn on the power (three blue LED will be on) and slide down the Rec Switch (3). If you see the red LED is steadily on, it means the video recording has started (1080p). If you see the red LED just blink once, then the memory card is not inserted. If the red LED blinks slowly for 3 times, then the memory is already full.
2. To test the zoom function, please slide down the Zoom Switch (2) to zoom in 4x while the recording is on. Then slide up the Rec Switch (3) to turn off the recording (red LED will be off). The video clip will be saved and you can check it later in PC.
3. For WiFi connection, while the Rec is on, slide down the Wifi Switch (6) to turn on the connection. You'll see the red LED turns orange if it starts connecting. Once it's successfully connected to WiFi, the LED will remain orange. Then you can start to control the unit with your APP (The App can control the unit within the range of 5-8 meters away, please refer to the Wifi guidebook for details).
4. If you want to reset the unit, turn the Rec on (red LED on) and press the Reset Button (7), the Red LED will be off. Restart the Power & Rec, the unit is already reset.
If you forget the password, press the Default Button (8) for 3 seconds and the password will be back to default setting (8888888) and the hidden SSID will show up again with original names.
If you want to restore the unit back to factory default settings, press Default Button (8) for 10 seconds. You will see the red LED blinks three times and off (Rec will stop). After 3-5 seconds, the yellow LED will be on and starts blinking. Every settings will be back to default settings.

6

6. Once the memory is full, the red LED will blink slowly for 3 times and the unit will be automatically turned off.


7. Whether the unit is connected to APP, you can turn on/off the recording by switching the Rec Switch (3). Once the APP is connected, you can do the device setting, choose recording mode and take snapshot with the APP.

8. PC Related Download and Setting

1. To view the files in your PC while the memory card is in the unit, connect the USB cable to the PC and turn on the Rec Switch. Once connected, the red LED will be on, your previous recording clips will be saved in the unit automatically. You can now view the recording files in the Removable Disk.
2. If the memory card is not inserted, once you connect the unit with the USB cables to the PC, the unit will be switched to web-cam mode automatically.
3. To change the default SSID name, right-click on Windows desktop. Choose Notepad to create a *.txt (text) file. Name the file as **setSSID.txt** and type the SSID name you want in the file and save the text file to the root directory of the memory card. **Note that SSID name must be started with PV and followed by at least 6 alphanumeric characters (the maximum length is 16 characters), e.g. PV888888.**

7

PV-IP6HDW Smartphone 6 Battery Case DVR Quick Guide

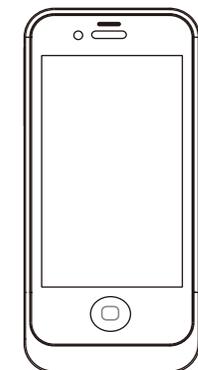

LawMate, innovation never stops

LawMate®