

Congratulations and thank you for purchasing the Wireless Wall Clock Camera!

This newly designed fully functional wall clock is well-equipped with a completely undetectable, high quality camera and selectable 4-channel 2.4 GHZ wireless transmitter. Also included in this indispensable covert surveillance system are matching selectable 4-channel receiver and all necessary power adaptors. Additional features include:

- 300 - 700 foot line-of-sight (LOS) approximate range
- LOS is dependent upon obstructions and interference from other wireless devices
- High resolution camera
- Low light capabilities
- Easy installation
- User-friendly operation
- FCC-approved 2.4 GHz transmitter

Upon reading through these instructions, you will be able to operate your state-of-the-art Wireless Wall Clock Camera even if you have never before used a covert video surveillance system.

NOTICE: In accordance with United States Codes, this unit is not equipped with audio capabilities. It is illegal for non-authorized persons to own, possess, or utilize surreptitious listening devices for the purpose of intercepting and/or recording another person's oral communications. Any modifications made to this unit are unauthorized and will immediately void the manufacturer's warranty.

Operating the Clock

Insert one fresh “AA” size battery into the battery holder in back of the clock according to the diagram inside the battery compartment. Alkaline type batteries strongly recommended.

Setting Clock Time

Turn the hand setting knob on back side of the clock in a clockwise or counter clockwise direction.

NOTE: As soon as clock slows suddenly or stops, indicating a weak or exhausted battery, remove the battery at once and replace to prevent battery leakage and subsequent damage to the clock. We are not responsible for damage caused by a leaking battery.

General Setup

Wireless Covert Camera

1. Place the Wall Clock Camera on a flat surface facing your target area. When determining the best possible site selection, pay particular attention to lighting. It is always best to have the lighting on or in front of your subject instead of behind it.
2. Plug the included 12V AC adaptor into a 110V wall outlet. Plug the 2.5mm male power plug of the 12V adaptor into the power plug leading from the Wall Clock Camera. Your wireless covert camera should now be operating.

2.4 GHZ Receiver

1. Position the receiver within 150ft – 300ft (see LOS) of the covert camera. For optimal performance, adjust the 2.4 GHz antenna on the receiver. Although the units will still work properly without facing each other, transmission range may be decreased.
2. Plug the included 9V AC adaptor into a 110V wall outlet. Plug the 2.5mm male power plug coming from 9V AC adaptor into the back of the receiver. Red LED will come on to indicate power.
3. Connect the male yellow RCA cable plug into the female yellow RCA jack located on the front of the receiver. (See Figure 1)

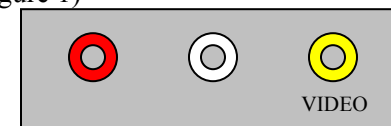


Figure 1

Operation

Once the Wireless Wall Clock Camera is in place and aligned with the receiver, you must connect the receiver to a monitor and/or video recorder to gain access to your video footage.

1. **To view video footage on a monitor or television**, connect the unattached end of the RCA video cable into the video input jack on your monitor or television.

To record video footage, connect the unattached end of the RCA video cable into the video input jack on your VCR or video recorder according to manufacturer's instructions.

2. Change the video input or auxiliary input for your monitor or recorder until video footage can be viewed. The input select button is usually located on the unit's remote control or on the front panel of the unit itself. However, some units may require you to select the video input from the on-screen menu. Therefore, consult the owner's manual for your monitor or video recording device for specific instructions.

If using a recorder, check video transmission by connecting another RCA cable from the video output jack on the recorder to a monitor or television.

3. Your monitor should now display the view from the Wall Clock Camera. Make any necessary adjustments to the receiver antenna for best reception.

Tip: If picture quality is not optimum, try selecting an alternative channel.

Channel Selection

Your wireless transmitter and receiver have channel-select capabilities on four channels. In order to capture video, transmitter and receiver must be on the same channel.

1. To change the channel on the transmitter, push the red channel button found inside the battery compartment on the bottom of the clock radio. The unit is initially set to channel 1. Push the button once for channel 2, twice for channel 3, or three times for channel 4.
2. To change the channel on the receiver, simply slide the channel select switch of the appropriate channel down. All other channel switches must remain up, as only one channel per camera may be selected.

NOTE: If your picture is going on and off every three to five seconds, you may have inadvertently selected more than one channel. Adjust switches to be sure that you have selected only one channel.

To use the receiver with multiple cameras, slide all of the appropriate channel select switches, one per camera, into the down position. The receiver is auto-switch capable and should now switch every three to five seconds between selected channels.

Safety Precautions

- Use only the included power supply to operate your wireless surveillance system.
- To avoid electrical shock, do not attempt to open the unit.
- To prevent fire or shock hazard, do not expose this product to rain or moisture. Do not operate near bath tub, sink, or swimming pool. Avoid operation in moist environments.
- Do not overload electrical outlets or extension cords as this may result in fire or electric shock.

Warranty Information

The manufacturer warrants their products to be free from defects in material or workmanship for a period of one year from the date of the original purpose. The limited warranty stated above is subject to these terms and conditions.

TERMS AND CONDITIONS

1. Limitation on Warranties: All merchandise carries a one (1) Year Manufacturer's Limited Warranty on parts and labor. SELLER MAKES NO WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OR FITNESS FOR ANY PARTICULAR PURPOSE OR MERCHANTABILITY. No agent, employee or representative of Seller's are authorized to bind the Seller to any affirmation, representation, or warranty, oral or written, unless by separate written instrument designed by Seller, which by its terms state that it is included as part of this agreement.
2. Claims: Receipt of goods shall be deemed acceptance of the goods received. All claims for defective goods or revocation of acceptances, for shortages, for delays, or failures in shipment or delivery, or for any cause shall be deemed waived and released by the Buyer unless it is made in writing within (7) days after receipt of goods. All claims must state specifically and in reasonable detail the nature of all objections, and must be accompanied by delivery receipt or photocopy of the sales order or packing slip. Any delivery not placed in dispute in a timely manner shall be paid for by the Buyer and all uncontested amounts due shall be paid by the Buyer with terms specified. As a condition to making a claim for missing or damaged goods sent, the Customer is responsible for initiating and pursuing with the carrier.
3. Limitation on Seller's Liability: Seller's liability will be limited to replacement or repair of defective goods upon receipt of goods in a timely manner per paragraph two herein. In no event will Seller be liable for consequential or special damages or for transportation, installation, removal, adjustment or other expenses or losses which may arise in connection with the use or installation of the goods; late delivery, failure to deliver or from any other cause. Notwithstanding the terms of this Agreement, if there should arise any liability of Seller, such liability shall be limited to an amount equal to one-half (1/2) the costs of the goods or \$250.00, whichever is less.
4. Returned Material: In no case will the seller give a refund. Seller will accept most goods for exchange or credit, at the Seller's discretion within 30 days of purchase date. In no case are goods to be returned without first obtaining Seller's permission. Only unused goods as currently manufactured, in original unopened packaging and which has been paid for by Buyer in accordance with Seller's payment terms will be considered for exchange or credit upon receipt of proof of purchase. Special ordered items and obsolete items cannot be returned for credit. Material accepted for credit will be subject to a 15% restocking charge for service and handling. Seller will not be obliged to replace any product that has been abused, improperly installed or otherwise misused. Items must be returned in their original packaging, securely packed to reach the Seller without damage.
5. Governing Law: This agreement shall be governed by the laws of the State of Tennessee.

IT IS THE USER'S RESPONSIBILITY TO ENSURE THAT THIS EQUIPMENT IS USED IN ACCORDANCE WITH THE LAW(S) OF THE JURISDICTION IN WHICH THIS EQUIPMENT IS UTILIZED.

THIS EQUIPMENT HAS BEEN TESTED AND HAS BEEN FOUND TO BE IN COMPLIANCE WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTIONS AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT USES, GENERATES AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

Part 15 Low Power:

ANY CHANGES OR MODIFICATIONS TO THIS EQUIPMENT WITHOUT THE EXPRESS AUTHORIZATION OF THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT. (RULE 15.21 OF THE FCC)