

Manufacturer's Limited Warranty

Manufacturer warrants all Covert Video and Sleuth Gear Hidden Video Products (Product) assembled and sold by Manufacturer to be free of defects in material and workmanship, subject to the following conditions. The duration of Manufacturer's warranty with respect to the Product is limited to one (1) year from the date of sale to the original consumer purchaser only for Products delivered within the fifty (50) states of the United States, District of Columbia, or the possessions and territories of the United States

No other express warranties are made with respect to any Product. All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited to the warranty period set forth above. This warranty is not transferable and applies only to the original consumer purchaser of the Product.

Manufacturer will, as its sole obligation under this warranty, replace or repair, at its option, any Product that does not conform to this warranty. Under no circumstances will the Manufacturer issue credit or give a refund for Product covered by this warranty. Furthermore, under no circumstances will Manufacturer be liable for any incidental or consequential damages under this warranty or any implied warranties.

What Is Not Covered. This limited warranty does not cover Products that in Manufacturer's judgment have damage resulting from any (i) deviation from Manufacturer's operating instructions as printed in Manufacturer's catalog or on any packaging, labels or other literature provided with a Product, (ii) installation of a Product in a manner which is inconsistent with Manufacturer's written instructions, (iii) alteration, modification of or tempering with a Product, (iv) misuse, (v) neglect, (vi) abuse, (vii) accident, (viii) power surge, static electricity or other electrical discharge, (ix) normal wear and tear, (x) commercial use, (xi) service by anyone other than a Manufacturer authorized repair facility, or (xii) other improper application, installation or operation of the Product. Or, (xiii) have been purchased from inventory clearance or liquidation sales or other sales in which Manufacturer expressly disclaims its warranty obligation pertaining to the Product.

How you (the Customer) can get service: To obtain warranty service during the warranty period, you must return the defective Product with the original receipt to the original place of purchase. Contact them for return instructions.

If warranty service is needed at any time during the warranty period, the purchaser will be required to furnish a sales receipt/proof of purchase indicating the date of purchase, amount paid and place of purchase. Customers who fail to provide such proof of purchase will be charged for the repair of any Product.

How state law relates to the warranty: Some states do not allow limitations on how long implied warranties last, or the exclusion or the limitation of incidental or consequential damages. So the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights that may vary from state to state.

NO PERSON IS AUTHORIZED BY MANUFACTURER TO MODIFY OR ADD TO THIS LIMITED WARRANTY.

For warranty information on Products delivered outside the United States please contact the original place of purchase.

IT IS THE USER'S RESPONSIBILITY TO ENSURE THAT THIS EQUIPMENT IS USED IN ACCORDANCE WITH THE LAW(S) OF THE JURISDICTION IN WHICH THIS EQUIPMENT IS UTILIZED.

DO NOT ATTEMPT TO RETURN PRODUCT TO ORIGINAL MANUFACTURER, AS THIS PRODUCT HAS BEEN MODIFIED AND IS NO LONGER SUBJECT TO ORIGINAL MANUFACTURER'S WARRANTY. IN THE CASE OF A DEFECTIVE PRODUCT, CONTACT PLACE OF PURCHASE FOR RETURN PROCEDURE.

THIS EQUIPMENT HAS BEEN TESTED AND HAS BEEN FOUND TO BE IN COMPLIANCE WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTIONS AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT USES, GENERATES AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

Part 15 Low Power:

ANY CHANGES OR MODIFICATIONS TO THIS EQUIPMENT WITHOUT THE EXPRESS AUTHORIZATION OF THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT. (RULE 15.21 OF THE FCC)



SLUETHGEAR COVERT DIGITAL WIRELESS DVD PLAYER WITH RCA RECEIVER

**Congratulations and thank you for purchasing the ???
Digital Hidden Camera!**

This newly designed fully functional ???? is equipped with a completely undetectable, high quality camera and comes with a 2.4 GHZ receiver

Additional features include:

- 300 - 700 foot line-of-sight (LOS) approximate range (LOS is dependent upon obstructions and interference from other wireless devices)
- High resolution camera
- Low light capabilities
- Easy installation
- User-friendly operation
- FCC-approved 2.4 GHz transmitter

Upon reading through these instructions, you will be able to operate your state-of-the-art Hidden Camera even if you have never before used a covert video surveillance system.

This is primarily a surveillance device; due to the electronics installed you might experience interference when using the AM/FM radio functions. This is not a defect and is not deemed a warranty issue. Please select another station if a clearer signal is desired.

NOTICE: In accordance with United States Codes, this unit is not equipped with audio capabilities. It is illegal for non-authorized persons to own, possess, or utilize surreptitious listening devices for the purpose of intercepting and/or recording another person's oral communications. Any modifications made to this unit are unauthorized and will immediately void the manufacturer's warranty.

Frequently Asked Questions and Trouble Shooting

I do not get a picture what do I do?

Be sure that the Hidden Camera unit is plugged into a 110V power outlet.

See pairing instructions on page 4 and re "pair" the receiver with the transmitter.

Check your connections. Make sure they are all properly attached and that your video jack is plugged into the input and not the output and check to see that your TV or VCR is on the video setting

My signal strength is low how do I fix the problem?

Consider the position of the camera in relation to the receiver and adjust the antenna on the receiver to face the direction of the camera.

Reposition the camera or the receiver to a different location

What does the "QLT" button do on the front of the receiver?

QLT refers to the image quality. With the switch to the left your camera quality is 320 x 240, with the switch to the right the quality is 640 x 480

*Please note that a higher quality picture, depending on placement of the devices may slow down the frame rate.

**Please note that plugging this unit into any electrical outlet other than a 110V will cause the unit to not function and voids the warranty on this unit, Please use correct adapters for your voltage.

Setup

Place the Hidden Camera Unit on a flat surface facing your target area. When determining the best possible site selection, pay particular attention to lighting. It is always best to have the lighting on or in front of your subject instead of behind it.

Plug the power cord of the alarm clock into the nearest 110V AC outlet (*120 Volt, 60Hz ONLY*)

Position the receiver within 300 ft (see LOS) of the covert camera.

Plug the included ac adapter into the (1) black power cable on the receiver and then plug into an 110v Ac outlet

Plug either of the yellow (2) RCA male jacks into your TV / Monitor's Yellow input, be sure you have selected the necessary input channel to display the video.

Once this is done you should have a picture. If you do not see Page 4 for "paring instructions"

You are ready to view and or record what your Hidden Covert camera is viewing



Includes:
Digital Wireless Hidden Camera Unit
RCA receiver
Manual



Pairing the Wireless USB Receiver with the Hidden Camera Transmitter

Your Receiver and camera have already been “paired”, in the event you need to re pair the units follow this guide.

Make sure the camera is powered on. Press the (1) Pairing Button on the hidden camera unit, see diagram below to locate the button the LED will begin blinking fast on the unit (see diagram below for location of the LED's) (2) Immediately press the button on the receiver as indicated in the diagram below. Your receiver and transmitter are now paired and should work properly.



Safety & Precautions

Safety Precautions

Use only the included power supply to operate your wireless surveillance system

To avoid electrical shock, do not attempt to open the unit.

To prevent fire or shock hazard, do not expose this product to rain or moisture.

Do not operate near bath tub, sink, or swimming pool.

Avoid operation in moist environments.

Do not overload electrical outlet. **Power surges or over voltage (i.e. 220 Volt) will damage the unit and VOID THE WARRANTY. A surge suppressor and other adaptors may be required and are the responsibility of the user.**

This is primarily a surveillance device; due to the electronics installed you might experience interference when using the AM/FM radio functions. This is not a defect and is not deemed a warranty issue. Please select another station if a clearer signal is desired.

Please see the enclosed manual for the functions of the DVD Player.