
1. Name and Parts

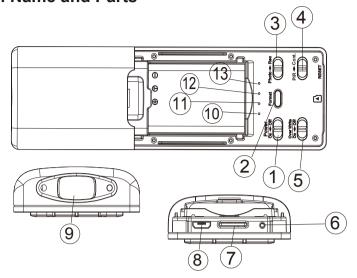

9. PIR Sensor

10. Rec(Red)LED

11. Overwrite(Bright Green)LED

12. Charging(Green)LED

13. Power(Blue)LED

- 1. Power switch
- 2. Format Button
- 3. Photo/Rec Switch
- 4. PIR/Cont. Switch
- 5. Overwrite Switch
- 6. Reset Button
- 7. Memory Card Slot
- 8. USB Port

2. Package Content








Memory Card


USB cable

3. LED Indicators

LED Indicators	Device Status
Solid Red LED	Recording on
Red LED Blinks Once	Snapshot
Blinking Red LED	Memory Card Full
Solid Green LED	Device Charging
Solid Blue LED	Power On
Blinking Blue LED	No Memory Card
Solid Bright Green LED	Overwrite On


4. Battery Charging

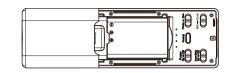

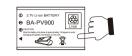

- 1. Remove the battery cover from back.
- 2. Slide the battery into battery tray.
- 3. Close the battery tray with battery cover.
- 4. Connect the USB cable to the base.
- 5. Plug the USB cable to the PC or other USB power source (the green LED will turn on).
- 6. Leave the DVR charging until the green LED is turned off.

5. Format Memory Card

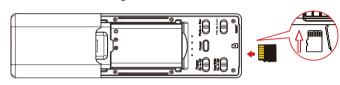

- 1. Insert the memory card as shown in the illustration.
- 2. Press & hold on (2) then power on the device.
- 3. You will see the blue LED blinking when the memory card is being formatted. The blue LED will be off when the memory card format is completed.

6. Operation

- 1. Continuous Recording: First slide 3 to **Rec.** Second, slide **to Cont.** Next, power on the device by sliding 1 to **On.**
- PIR Activated Recording: First slide 3 to Rec. Second, slide 4 to PIR. Next, power on the device by sliding 1 to On. Whenever the PIR sensor is triggered, DVR will start to record after 3 secs.

Photo Taking: Slide 3 to **Photo**, and then slide 4 to **PIR**. Next, power on the device by sliding 1 to **On**. Device takes 3 photos whenever the PIR sensor is triggered.

Note: When the device is set to **Cont.**, it will be recording continuously no matter you choose **Rec** or **Photo**.

Overwrite Function : Slide (5) to **Overwrite**, and then power on the device.

Reset: Press (6) once. The device will reset.

7. Download Videos and Photos from DVR

- 1. Video and photo files are stored in the memory card.
- 2. There are two ways to download video/photo files.
- 2.1 Using memory card reader to download video/photo files.
- 2.2 With the device powered on and memory card inserted, connect the device to PC by USB connection. It will be recognized by PC as an external drive for user to download the video recordings and photo files.

8. Others


Please be noted that you have to turn off the device first before you change the Photo/Rec mode. The device may crash if you suddenly change the mode with the power on.

9. Specification

PV-RC10FHD Built-in Camera Module		
Sensor resolution	2304x1536	
Sensor sensitivity	3.3 Lux @ F 2.0	
Lens F/No.	F 3.2	
Focal Length	4mm	
Angle of View	66°	
	Video Spec.	
Algorithm	H.264, JPEG	
File Format	MOV, JPG	
Video recording mode	PIR Activated / Continuous Recording	
Recoreding Capability	1920x1080 / 1280x720	
Frame rate	Up to 30 fps	
Photo Capability	5M	
	Storage & I/O	
Memory type	Micro SD Card (Support SDHC max.32GB)	
Data interface	Mini USB 2.0	
	Misc.	
Date/Time Table	YYYY/MM/DD, HH:MM:SS	
	Power	
Power Input	DC 5V	
Power Consuption	250mA-390mA	
Standby Consuption	About 5.2mA	
Standby time	8 days	
Battery Input	DC 3.7V / 1100mA polymers battery	
Physical		
Dimension	17 x 5 x 1.5 cm	
Weight	110 g	

PIR Sensor Illustration

1.Detection Range

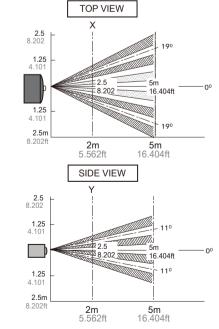


2.Detection concerns

They may fail to detect successfully if a heat source other than a human being is detected or if there are no temperature changes in or movement of a heat source. Care must generally be taken in the following cases. The performance and reliability of the sensors must be checked out under conditions of actual use.

- <1>Cases where a heat source other than a human being is detected
 - (1) When a small animal enters the detection range.
 - (2) When the sensor is directly exposed to sunlight, a vehicle's headlights, an incandescent light or some other source or far infrared rays.
 - (3) When the temperature inside the detection range has changed suddenly due to the entry of cold or warm air from an air-conditioning or heating unit, water vapor from a humidifier, etc.
- <2>Cases where it is difficult to detect the heat source.
 - (1) When an object made of glass acrylic or other subject which far infrared rays have difficult passing through is located between the sensor and what is to be detected.
 - (2) When the heat source inside the detection range hardly moves or when is moves at high speed.


3.Installation Suggestion

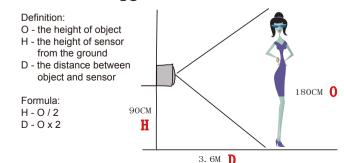


For example: To film a man at 180cm height in the video, the sensor should be placed at 90cm height above the ground and the man is 3.6m away from the sensor.

PV-RC10FHD

TV 1080p Remote Control Covert DVR Quick Guide

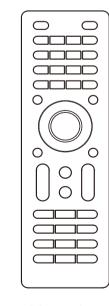

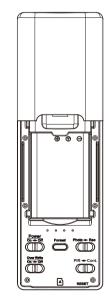

LawMate, innovation never stops



6

7